
FUSCA 1976

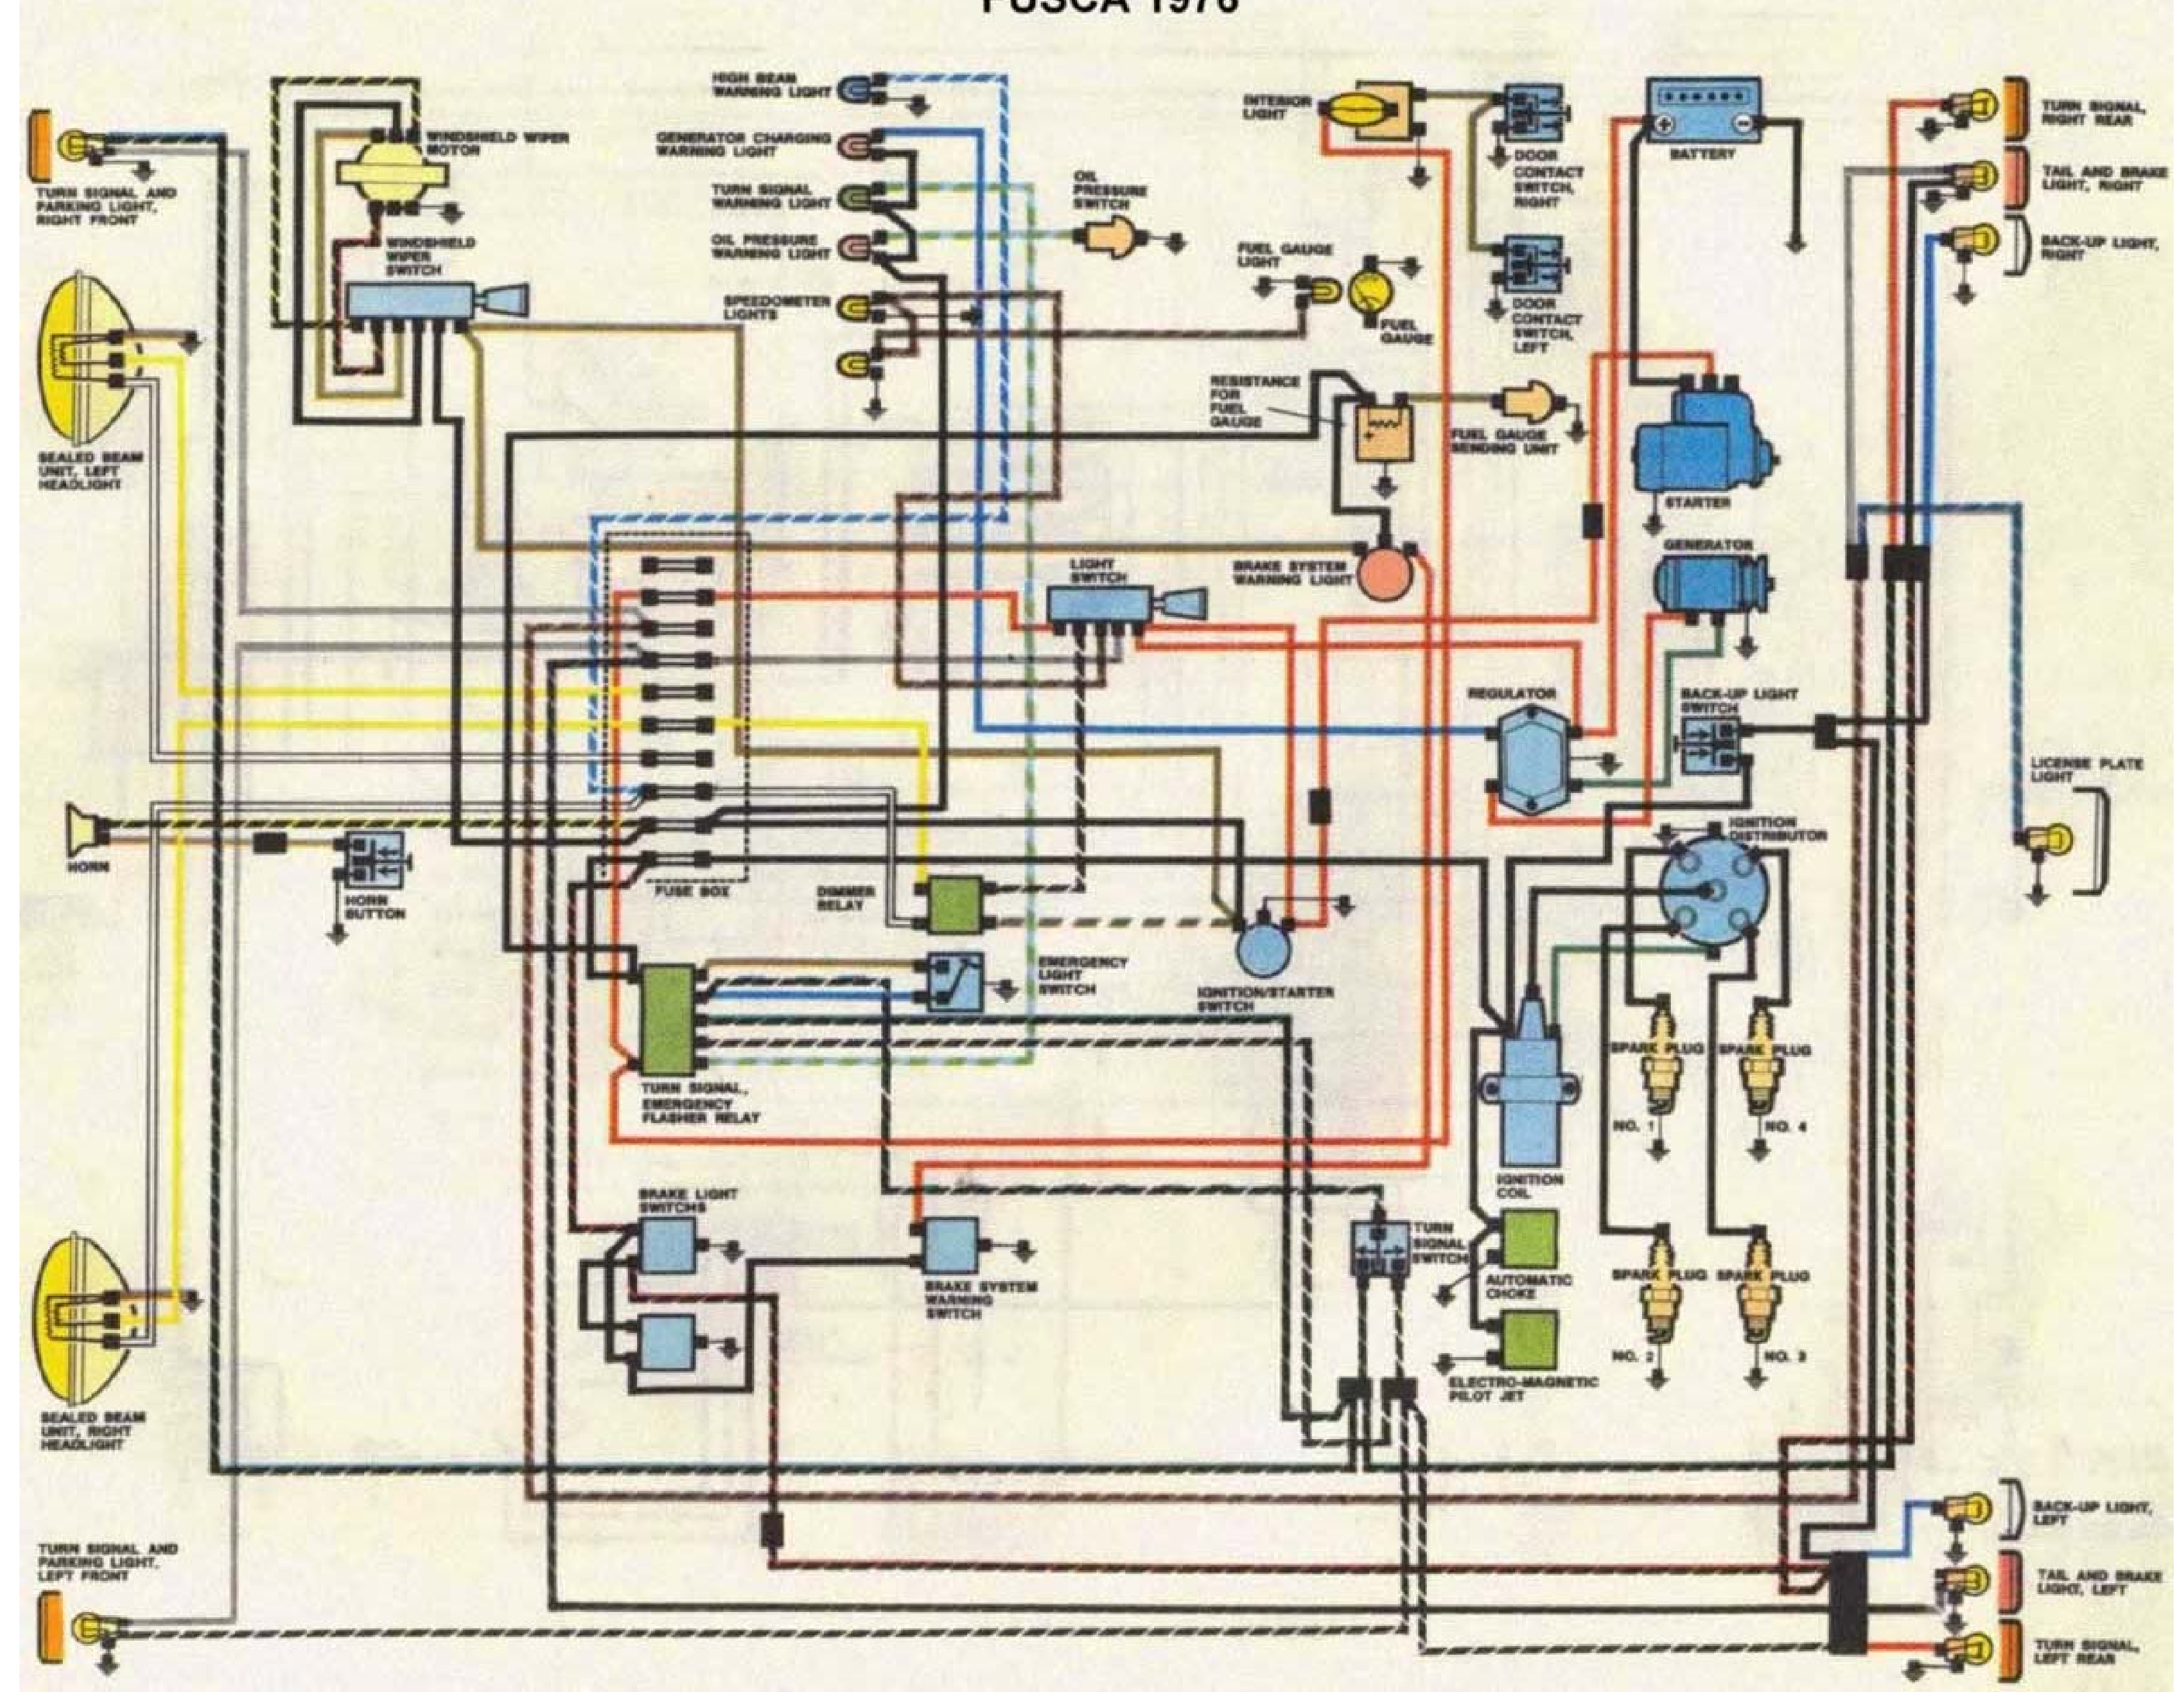

TURN SIGNAL AND PARKING LIGHT, RIGHT FRONT
SEALED BEAM UNIT, LEFT HEADLIGHT
HORN
HORN BUTTON
SEALED BEAM UNIT, RIGHT HEADLIGHT
TURN SIGNAL AND PARKING LIGHT, LEFT FRONT
WINDSHIELD WIPER MOTOR
WINDSHIELD WIPER SWITCH
HIGH BEAM WARNING LIGHT
GENERATOR CHARGING WARNING LIGHT
TURN SIGNAL WARNING LIGHT
OIL PRESSURE WARNING LIGHT
SPEEDOMETER LIGHTS
OIL PRESSURE SWITCH
FUSE BOX
DIMMER RELAY
EMERGENCY LIGHT SWITCH
TURN SIGNAL, EMERGENCY FLASHER RELAY
BRAKE LIGHT SWITCHS
BRAKE SYSTEM WARNING SWITCH
LIGHT SWITCH
IGNITION/STARTER SWITCH
TURN SIGNAL SWITCH
INTERIOR LIGHT
FUEL GAUGE LIGHT
FUEL GAUGE
RESISTANCE FOR FUEL GAUGE
FUEL GAUGE SENDING UNIT
BRAKE SYSTEM WARNING LIGHT
DOOR CONTACT SWITCH, RIGHT
DOOR CONTACT SWITCH, LEFT
BATTERY
STARTER
GENERATOR
REGULATOR
BACK-UP LIGHT SWITCH
IGNITION DISTRIBUTOR
IGNITION COIL
AUTOMATIC CHOKE
ELECTRO-MAGNETIC PILOT JET
SPARK PLUG
NO. 1
SPARK PLUG
NO. 4
SPARK PLUG
NO. 2
SPARK PLUG
NO. 3
TURN SIGNAL, RIGHT REAR
TAIL AND BRAKE LIGHT, RIGHT
BACK-UP LIGHT, RIGHT
LICENSE PLATE LIGHT
BACK-UP LIGHT, LEFT
TAIL AND BRAKE LIGHT, LEFT
TURN SIGNAL, LEFT REAR